

STOL Functions

Copyright 1999-2006, United States Government as represented by the Administrator of the National Aeronautics and Space Administration. No copyright is claimed in the United States under Title 17, U.S. Code.

This software and documentation are controlled exports and may only be released to U.S. Citizens and appropriate Permanent Residents in the United States. If you have any questions with respect to this constraint contact the GSFC center export administrator, <Thomas.R.Weisz@nasa.gov>.

This product contains software from the Integrated Test and Operations System (ITOS), a satellite ground data system developed at the Goddard Space Flight Center in Greenbelt MD. See <<http://itos.gsfc.nasa.gov/>> or e-mail <itos@itos.gsfc.nasa.gov> for additional information.

You may use this software for any purpose provided you agree to the following terms and conditions:

1. Redistributions of source code must retain the above copyright notice and this list of conditions.
2. Redistributions in binary form must reproduce the above copyright notice and this list of conditions in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgement:
This product contains software from the Integrated Test and Operations System (ITOS), a satellite ground data system developed at the Goddard Space Flight Center in Greenbelt MD.

This software is provided ‘‘as is’’ without any warranty of any kind, either express, implied, or statutory, including, but not limited to, any warranty that the software will conform to specification, any implied warranties of merchantability, fitness for a particular purpose, and freedom from infringement and any warranty that the documentation will conform to their program or will be error free.

In no event shall NASA be liable for any damages, including, but not limited to, direct, indirect, special or consequential damages, arising out of, resulting from, or in any way connected with this software, whether or not based upon warranty, contract, tort, or otherwise, whether or not injury was sustained by persons or property or otherwise, and whether or not loss was sustained from or arose out of the results of, or use of, their software or services provided hereunder.

STOL Functions

This document describes the functions available in ITOS STOL and other applications that use the Sx library.

ABS – Absolute value of x

`ABS(x)` computes the absolute value of `x`. If `x` is float (or string which can be converted to float), the result of `ABS(x)` is float. Otherwise `x` must be int or convertible to int, and the result of `ABS(x)` is int.

```
ABS(15) ⇒ (int) 15
ABS(-3.9) ⇒ (float) 3.9
```

ACOS – Compute arc cosine of x

`ACOS(x)` computes the arc cosine of `x`. `x` must range from -1 to 1; the resulting angle is in radians and will range from 0 to pi.

ASIN – Compute arc sine of x

`ASIN(x)` computes the arc sine of `x`. `x` must range from -1 to 1; the resulting angle is in radians and will range from -pi/2 to pi/2.

ATAN – Compute arc tangent of x

`ATAN(x)` computes the arc tangent of `x`. The resulting angle is in radians and will range from -pi/2 to pi/2.

BWAND – Bitwise AND of x and y

`BWAND(x,y)` computes the bitwise AND of `x` and `y`. `x` and `y` must be unsigned (or convertible to unsigned); the result of `BWAND(x,y)` is unsigned.

```
BWAND(b'00110011',b'10101010') ⇒ b'00100010'
BWAND(123,55) ⇒ 51
```

BWINVERT – Invert bits in x

`BWINVERT(x)` inverts the bits in `x`. `x` must be unsigned (or convertible to unsigned); the result of `BWINVERT(x)` is unsigned.

```
BWINVERT(x'F0F0F0F0') ⇒ (unsigned) x'0F0F0F0F'
```

BWLSHIFT – Logical left shift x y bits

`BWLSHIFT(x,y)` computes the value of `x` shifted left `y` bits. (If `y` is negative, this amounts to a right shift). `y` must be .GT. -32 and .LT. 32. The result of `BWLSHIFT(x,y)` is unsigned.

```
BWLSHIFT(b'0001',3) ⇒ b'1000'
BWLSHIFT(1,3) ⇒ (unsigned) 8
```

BWOR – Bitwise OR of x and y

BWOR(x,y) computes the bitwise OR of x and y. x and y must be unsigned (or convertible to unsigned); the result of **BWOR(x,y)** is unsigned.

```
BWOR(b'00110011',b'10101010') ⇒ b'10111011'
BWOR(123,55) ⇒ 127
```

BWRSHIFT – Logical right shift x y bits

BWRSHIFT(x,y) computes the value of x shifted right y bits. (If y is negative, this amounts to a left shift). y must be .GT. -32 and .LT. 32. The result of **BWRSHIFT(x,y)** is unsigned.

```
BWRSHIFT(b'1000',3) ⇒ b'0001'
BWRSHIFT(100,3) ⇒ (unsigned) 12
```

CEIL – Smallest int .GE. x

CEIL(x) computes the smallest int that is .GE. x. x must be float (or convertible to float); the result of **CEIL(x)** is int.

```
CEIL(4.8) ⇒ (int) 5
CEIL(-4.8) ⇒ (int) -4
```

CONCAT – Concatenate strings (2 to 999)

CONCAT(x,y,...) concatenates all arguments into a string. The result of **CONCAT(x,y,...)** is a string.

```
CONCAT("name",1) ⇒ "name1"
```

To sequential print to a file whose name is generated from the year and day of year, do something like:

```
GLOBAL day,year
day = 100
year = 93
SEQPRT acstmp > (concat("acstmp.",year,"-",day))
```

The above example sequential prints to acstmp.93-100.

COS – Cosine of x

COS(x) computes the cosine of x. x must be float (or convertible to float); the result of **cos(x)** is float. x is in radians.

```
COS(0) ⇒ (float) 1
COS(.123) ⇒ (float) 0.992445
```

DELTA

This function is not yet implemented. It is intended to be used with `WAIT UNTIL` to determine the delta difference between consecutive values (to make it possible to ‘wait until the value changes by more than 1.7’, for example).

EVTMSG

This function is not yet implemented. It is intended to be used for its side effect, which is to generate an event message.

EXISTS – Has *mnem*’s value been set?

`EXISTS(mnemonic)` returns 1 if *mnemonic* is, in fact, a mnemonic and *mnemonic*’s value exists.

A mnemonic’s value is said to exist if it has ever been set. Most global mnemonics get set (and thus exist) when the system starts up. Telemetry mnemonics don’t exist until they’ve been received in telemetry (see `<undefined>` [Exist flag], page `<undefined>`).

FLOOR – Largest int .LE. *x*

`FLOOR(x)` computes the largest int that is .LE. *x*. *x* must be float (or convertible to float); the result of `FLOOR(x)` is int.

```
FLOOR(4.8) ⇒ (int) 4
FLOOR(-4.8) ⇒ (int) -5
```

FORMAT – Format *x*

The `FORMAT(fmt,x)` function creates a string containing the value of *x* formatted according to *fmt*.

fmt is similar to a C language `printf` conversion specification and is a string beginning with the % character, ending with the conversion character, and possibly containing conversion parameters in between. Note that *format* must begin with the % character and must end with the conversion character!

The optional conversion parameters are the conversion flags, minimum field width, and precision; an example of a conversion with all of the optional conversion parameters is `%+8.4f` – + is a conversion flag; 8 is the minimum field width, and 4 is the precision.

diouxB**** The int (or appropriate variant) argument is converted to signed decimal (**d** and **i**), unsigned octal (**o**), unsigned decimal (**u**), unsigned hexadecimal (**x** and **X**), or unsigned binary (**b**) notation. The letters ‘**abcdef**’ are used for **x** conversions; the letters ‘**ABCDEF**’ are used for **X** conversions. The precision, if any, gives the minimum number of digits that must appear; if the converted value requires fewer digits, it is padded on the left with zeros.

- eE** The double argument is rounded and converted in the style `[-]d.ddde+-dd` where there is one digit before the decimal-point character and the number of digits after it is equal to the precision; if the precision is missing, it is taken as 6; if the precision is zero, no decimal-point character appears. An E conversion uses the letter E (rather than e) to introduce the exponent. The exponent always contains at least two digits; if the value is zero, the exponent is 00.
- f** The double argument is rounded and converted to decimal notation in the style `[-]ddd.ddd`, where the number of digits after the decimal-point character is equal to the precision specification. If the precision is missing, it is taken as 6; if the precision is explicitly zero, no decimal-point character appears. If a decimal point appears, at least one digit appears before it.
- g** The double argument is converted in style f or e (or E for G conversions). The precision specifies the number of significant digits. If the precision is missing, 6 digits are given; if the precision is zero, it is treated as 1. Style e is used if the exponent from its conversion is less than -4 or greater than or equal to the precision. Trailing zeros are removed from the fractional part of the result; a decimal point appears only if it is followed by at least one digit.
- c** The int argument is converted to an unsigned char, and the resulting character is written.
- s** The argument is converted to a character string. Characters are written up to (but not including) a terminating NUL character. If a precision is specified, no more than the number specified are written.

Some format examples:

```

FORMAT("%b",22)
⇒ 10110
FORMAT("%08b",22)
⇒ 00010110
FORMAT("%08X",22)
⇒ 00000016
FORMAT("%s","abcd")
⇒ abcd
FORMAT("%12s","abcd")
⇒          abcd

```

GETENV – get environment variable

The GETENV function returns the value of an environment variable.

```

SHOVAL GETENV(SHELL)
⇒ "/bin/tcsh"

```

ISCOMMAND – Is name a command mnemonic?

ISCOMMAND(name) tests whether or not name is a command mnemonic in the database. The result of ISCOMMAND(name) is non-zero if name is a command mnemonic. For cases that do not map the command database such as STOL, this call will always return 0.

ISDATE – Is x a date?

ISDATE(x) returns int 1 iff x evaluates to a date, and int 0 otherwise.

ISFLOAT – Is x a float?

ISFLOAT(x) returns int 1 iff x evaluates to a float, and int 0 otherwise.

```
ISFLOAT(1.2) ⇒ (int) 1  
ISFLOAT(1) ⇒ (int) 0
```

ISGLOBAL – Is name a global variable?

ISGLOBAL(name) tests whether or not name is a STOL global variable. (ISGLOBAL does `_not_` test for global mnemonics).

ISINLIMITS – Is the mnemonic in limits?

ISINLIMITS(name) tests whether or not name is a mnemonic within limits. ISINLIMITS(name) returns int 1 iff name is in limits, and int 0 otherwise.

ISINT – Is x an int?

ISINT(x) returns int 1 iff x evaluates to an int, and int 0 otherwise.

```
ISINT(1.2) ⇒ (int) 0  
ISINT(1) ⇒ (int) 1
```

ISLOCAL – Is name a local variable?

ISLOCAL(name) tests whether or not name is a STOL local variable. ISLOCAL(name) returns int 1 iff x is a STOL local variable, and int 0 otherwise.

ISMNEMONIC – Is name a telemetry mnemonic?

ISMNEMONIC(name) tests whether or not name is a telemetry mnemonic in the database. The result of ISMNEMONIC(name) is non-zero if name is a telemetry mnemonic. For cases that do map the telemetry database, this call will always return 0.

ISNULL – Is x null?

ISNULL(x) returns int 1 iff x is unset (i.e. NULL), and int 0 otherwise.

ISNUMBER – Is x an int, unsigned or float?

ISNUMBER(x) returns int 1 iff x is number, and int 0 otherwise.

ISREDHI – Is mnem’s value red high?

`ISREDHI(name)` returns 1 iff `name` mnemonic is in red high limit violation, and int 0 otherwise.

ISREDLO – Is mnem’s value red low?

`ISREDLO(name)` returns 1 iff `name` mnemonic is in red low limit violation, and int 0 otherwise.

ISSTATIC – Has mnem gone static?

`ISSTATIC(mnemonic)` returns 1 if `mnemonic` is static and returns 0 otherwise.

A mnemonic goes static if it isn’t received in telemetry within an appropriate interval of time (see `<undefined>` [Static flag], page `<undefined>`).

ISSTRING – Is x a string?

`ISSTRING(x)` returns int 1 iff `x` evaluates to a string, and int 0 otherwise.

ISSYMBOL – Is name a variable or mnemonic?

`ISSYMBOL(x)` returns int 1 iff `x` is a STOL variable or database mnemonic, and int 0 otherwise.

ISTIME – Is x a time?

`ISTIME(x)` returns 1 iff `x` evaluates to a time, and int 0 otherwise.

ISUNSIGNED – Is x unsigned?

`ISUNSIGNED(x)` returns 1 iff `x` evaluates to unsigned, and int 0 otherwise.

`ISUNSIGNED(0) ⇒ (int) 0`
`ISUNSIGNED(x’00’) ⇒ (int) 1`

ISVARIABLE – Is name a variable?

`ISVARIABLE(name)` returns int 1 iff `name` is a STOL variable, and int 0 otherwise.

ISYELLOWHI – Is mnem’s value yellow high?

`ISYELLOWHI(name)` returns 1 iff `name` mnemonic is in yellow high limit violation, and int 0 otherwise.

ISYELLOWLO – Is mnem’s value yellow low?

`ISYELLOWLO(name)` returns 1 iff `name` mnemonic is in yellow low limit violation, and int 0 otherwise.

LN – Natural log of x

`LN(x)` computes the natural log of `x`. `x` must be greater than 0.

LOG – Base 10 log of x

`LOG(x)` computes the base 10 log of `x`. `x` must be greater than 0.

LOWERCASE – Convert string to lower case

`LOWERCASE(x)` returns the lowercase equivalent of `x`.

MAX – Find largest number in list of 1 to 999 items

`MAX(x,y,...)` returns the largest number in the argument list. Works with both integers and floats or a mixture of both.

MIN – Find smallest number in list of 1 to 999 items

`MIN(x,y,...)` returns the smallest number in the argument list. Works with both integers and floats or a mixture of both.

MKDATE – Make date from raw secs and subsecs

The `MKDATE` function constructs a date from raw seconds and subseconds.

`MKDATE(808003397,1234) ⇒ 93-364-21:23:17.018829`

MKEPOCHDATE – Make date since given epoch from raw secs and subsecs

The `MKEPOCHDATE(epoch, sec, subseconds)` function constructs a date from raw seconds and subseconds based on given epoch.

`MKEPOCHDATE(GBL_DEF_EPOCH,808003397,1234) ⇒ 93-364-21:23:17.084364`

`MKEPOCHDATE(68-145-00:00:00.065535,808003397,1234) ⇒ 93-364-21:23:17.084364`

MKTIME – Make time from raw secs and subsecs

The `MKTIME(sec, subseconds)` function constructs a time from raw seconds and subseconds.

`SHOVAL MKTIME(123,456) ⇒ 0:02:03.006958`

MOD – Find remainder when x / y

The MOD(x,y) function can be used to determine if a number is odd or even:

```
MOD(112,2) ⇒ 0
MOD(113,2) ⇒ 1
MOD(114,2) ⇒ 0
```

NAME – Use string as a name

Allows the name of a command or submnemonic to be passed as an argument to a proc, as in:

```
PROC ABC(S1,S2)
/SOMECMD NAME(S1)=1, NAME(S2)=1
ENDPROC
```

which, when started with START ABC(XYZ,PDQ), issues the command /SOMECMD XYZ=1, PDQ=1. Whew. Another, less useful, example might make things more clear:

```
LOCAL X,Y
Y = 543
X = "Y"
SHOVAL NAME(X)
⇒ global Y: (int) 543
```

SIN – Sine of x

SIN(x) computes the sine of x . x must be float (or convertible to float); the result of SIN(x) is float. x is in radians.

SQRT – Square root of x

SQRT(x) computes the square root of x . x must be float (or convertible to float); the result of SQRT(x) is float.

STRFDATE – Format date

STRFDATE($fmt,date$) creates a string containing the value of $date$ formatted according to fmt .

fmt is a format string as used by the C library function strftime(). From man 3 strftime:

| | |
|------------|---|
| Aa | is replaced by the weekday name. A produces the full name; a produces the abbreviated name. |
| Bbh | is replaced by the month name. B produces the full name; b and h produce the abbreviated name. |
| C | shorthand for '%a %b %e %H:%M:%S %Y'. |
| c | shorthand for '%m/%d/%y %H:%M:%S'. |

| | |
|----|---|
| D | shorthand for '%m/%d/%y'. |
| de | is replaced by the 2-digit day of the month, 1 to 31. d preceeds single digits with '0'; e with space. |
| f | is replaced by the microseconds field of the input time as a 6-digit, zero-filled decimal number. |
| Hk | is replaced by the hour on a 24-hour scale, 0-23. H preceeds single digits with '0'; codek with space. |
| Il | is replaced by the hour on a 12-hour scale, 1-12. I preceeds single digits with '0'; l with space. |
| Jj | is replaced by the day of the year (Julian day). J begins with day '000'; j with day '001'. |
| M | is replaced by the minute, '00'-'59'. |
| m | is replaced by the month, '01'-'12'. |
| n | is replaced by a newline, which cannot appear on a page, but might be useful to an ITOS programmer. |
| p | is replaced by 'AM' or 'PM', as appropriate. |
| R | is shorthand for '%H:%M'. |
| r | is shorthand for '%I:%M:%S %p'. |
| S | is replaced by the number of seconds, '00'-'59'. |
| s | is replaced by the number of seconds in the input time, which are seconds from the UNIX epoch in local time. |
| TX | is shorthand for '%H:%M:%S'. |
| t | is replaced by a tab character, which is not useful in page definitions. |
| UW | is replaced by the week number of the year, '00'-'53'. U takes Sunday as the first day of the week; W takes Monday. |
| w | is replaced by the day of the week, '0'-'6', with Sunday as day '0'. |
| x | is shorthand for '%m/%d/%y'. |
| Yy | is replaced by the year. y produces the 2-digit year, '00'-'99'; 'Y' the four-digit year. |
| Z | is replaced by the timezone abbreviation. |

The following examples use STRFDATE to create log file names:

```
LOG >> (CONCAT("LOG.",STRFDATE("%m-%d",P@GBL_GMTOFF)))
⇒LOG.06-20
LOG >> (CONCAT("LOG.",STRFDATE("%b%d",P@GBL_GMTOFF)))
⇒LOG.Jun20
```

STRLEN – Determine length of string.

STRLEN(*x*) returns the number of characters in string *x*. *x* must be a string (or convertible to string); the result of STRLEN(*x*) is int.

```
STRLEN("123") ⇒ (int) 3
```

STRTOL – Convert a string to signed int

STRTOL(*string*,*b*)¹ returns the number in base *b* contained in *string*.

```
STRTOL("FF",16) ⇒ 255
STRTOL("10110",2) ⇒ 22
STRTOL("10110junk",2) ⇒ 22
STRTOL("junk",2) ⇒ (Operator error)
```

If base is not specified, 10 is assumed.

STRTOL can be used in conjunction with the ASK directive to allow the Test Conductor to enter a hex number:

```
LOCAL hex,decimal
ASK "enter a hex number", hex
decimal = STRTOL(hex,16)
shoval decimal
```

In the above example, if the Test Conductor enters 16 in response to the ASK directive's prompt, the SHOVAL directive's result is 22!

STRTOUL – Convert a string to unsigned int

STRTOUL(*string*,*b*)² is similar to STRTOL except it returns an unsigned number.

```
sho strtoul("0xf6741123",16)
⇒ 4134801699
sho strtol("0xf6741123",16)
⇒ 2147483647
```

SUBSTR – Extract substring

SUBSTR(*x*,*y*,*z*) extracts a substring from string *x*. Int *y* is the index of the first character in the substring (the first character in *x* has index 1). Optional int *z* is the number of characters in the substring; if *z* isn't specified, the substring uses the remaining characters in *x*. *x*, *y*, and *z* may be expressions.

```
SUBSTR("abcd",2) ⇒ "bcd"
SUBSTR("93-344-19:40:33",4,3) ⇒ "344"
```

The following directive logs event messages to a file named LOG-ddd where ddd is the current day-of-year:

```
LOG > (CONCAT("LOG-", SUBSTR(P@GBL_GMTOFF,4,3)))
```

¹ It's named STRTOL because it's modeled after the C library function strtol()

² It's named STRTOUL because it's modeled after the C library function strtoul()

TAN – Tangent of x

TAN(x) computes the tangent of **x**. **x** must be float (or convertible to float); the result of **TAN(x)** is float. **x** is in radians.

TODATE – Convert x to date

TODATE(x) converts **x** to a date. When converting an integral, float, or time value to date the value is treated as the number of seconds since the midnight that began Jan 1 1970.

TOFLOAT – Convert x to float

TOFLOAT(x) returns the float equivalent of **x**.

TOINT – Convert x to int

TOINT(x) returns the int equivalent of **x**.

TOSTRING – Convert x to string

TOSTRING(x) returns the string equivalent of **x**.

TOTIME – Convert x to time

TOTIME(x) returns the time equivalent of **x**.

TOUNSIGNED – Convert x to unsigned

TOUNSIGNED(x) returns the unsigned equivalent of **x**.

UPPERCASE – Convert string to uppercase

UPPERCASE(x) returns the uppercase equivalent of **x**.

Table of Contents

| | |
|--|----------|
| STOL Functions | 1 |
| ABS – Absolute value of x | 1 |
| ACOS – Compute arc cosine of x | 1 |
| ASIN – Compute arc sine of x | 1 |
| ATAN – Compute arc tangent of x | 1 |
| BWAND – Bitwise AND of x and y | 1 |
| BWINVERT – Invert bits in x | 1 |
| BWLSHIFT – Logical left shift x y bits | 1 |
| BWOR – Bitwise OR of x and y | 2 |
| BWRSHIFT – Logical right shift x y bits | 2 |
| CEIL – Smallest int .GE. x | 2 |
| CONCAT – Concatenate strings (2 to 999) | 2 |
| COS – Cosine of x | 2 |
| DELTA | 3 |
| EVTMSG | 3 |
| EXISTS – Has mnem’s value been set? | 3 |
| FLOOR – Largest int .LE. x | 3 |
| FORMAT – Format x | 3 |
| GETENV – get environment variable | 4 |
| ISCOMMAND – Is name a command mnemonic? | 4 |
| ISDATE – Is x a date? | 5 |
| ISFLOAT – Is x a float? | 5 |
| ISGLOBAL – Is name a global variable? | 5 |
| ISINLIMITS – Is the mnemonic in limits? | 5 |
| ISINT – Is x an int? | 5 |
| ISLOCAL – Is name a local variable? | 5 |
| ISMNEMONIC – Is name a telemetry mnemonic? | 5 |
| ISNULL – Is x null? | 5 |
| ISNUMBER – Is x an int, unsigned or float? | 5 |
| ISREDHI – Is mnem’s value red high? | 6 |
| ISREDLO – Is mnem’s value red low? | 6 |
| ISSTATIC – Has mnem gone static? | 6 |
| ISSTRING – Is x a string? | 6 |
| ISSYMBOL – Is name a variable or mnemonic? | 6 |
| ISTIME – Is x a time? | 6 |
| ISUNSIGNED – Is x unsigned? | 6 |
| ISVARIABLE – Is name a variable? | 6 |
| ISYELLOWHI – Is mnem’s value yellow high? | 6 |
| ISYELLOWLO – Is mnem’s value yellow low? | 7 |
| LN – Natural log of x | 7 |
| LOG – Base 10 log of x | 7 |
| LOWERCASE – Convert string to lower case | 7 |

| | |
|--|----|
| MAX – Find largest number in list of 1 to 999 items | 7 |
| MIN – Find smallest number in list of 1 to 999 items | 7 |
| MKDATE – Make date from raw secs and subsecs | 7 |
| MKEPOCHDATE – Make date since given epoch from raw secs and subsecs | 7 |
| MKTIME – Make time from raw secs and subsecs | 7 |
| MOD – Find remainder when x / y | 8 |
| NAME – Use string as a name | 8 |
| SIN – Sine of x | 8 |
| SQRT – Square root of x | 8 |
| STRFDATE – Format date | 8 |
| STRLEN – Determine length of string. | 10 |
| STRTOL – Convert a string to signed int | 10 |
| STRTOUL – Convert a string to unsigned int | 10 |
| SUBSTR – Extract substring | 10 |
| TAN – Tangent of x | 11 |
| TODATE – Convert x to date | 11 |
| TOFLOAT – Convert x to float | 11 |
| TOINT – Convert x to int | 11 |
| TOSTRING – Convert x to string. | 11 |
| TOTIME – Convert x to time. | 11 |
| TOUNSIGNED – Convert x to unsigned | 11 |
| UPPERCASE – Convert string to uppercase | 11 |